


SRTDB808-005

ACCESSIBLE SHOWER PANEL INSTALLATION MANUAL

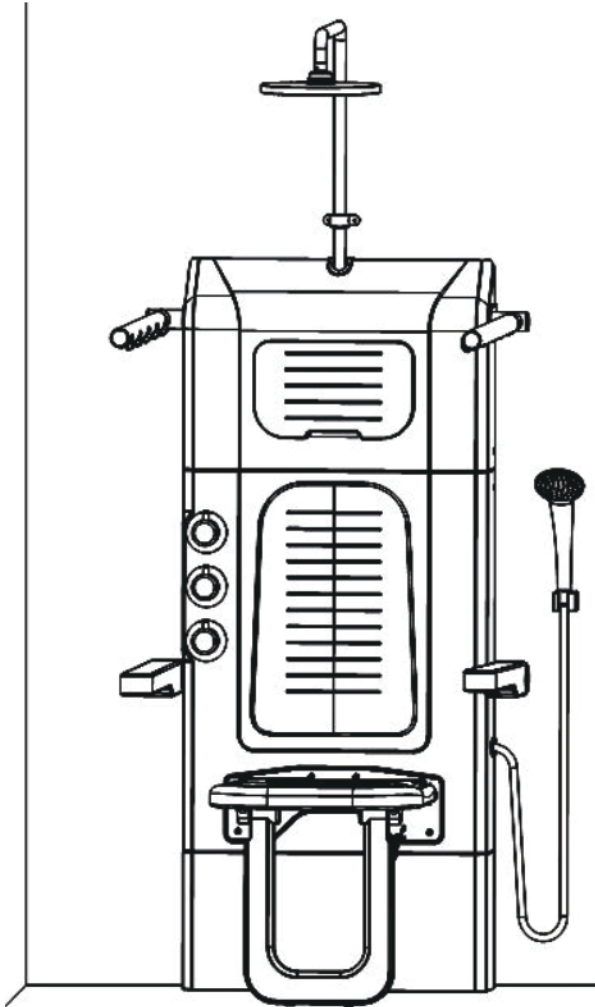

Thank you for purchasing Sorento product.

- **Mandatory Reading :** Review the Safety Precautions (page 4-5) prior to any handling or operation.
- **Third Party Compatibility :** This manual applies exclusively to Sorento components. If used in combination with products from other manufacturers, please refer to their respective instruction manuals.

Precautions Before Use

	Page
■ Quick Start	2
■ Safety Instructions	4
■ Component Names	6

How to Use When Showering 7

■ Seated	7
■ Standing	9
■ Handheld	10
■ Overhead	11
■ After Use Care	13

Cleaning & Maintenance 12

■ Main Body	12
■ Filters Cleaning	13
■ Freeze Protection	14
■ Support Feet	15

Troubleshooting 15

■ Specifications	16
■ Replacement Parts	16
■ Installation Dimensions	17

QUICK START

Helping you enjoy comfortable and pleasant daily use of this product. This page provides only the basic operation instructions.

For details, please refer to the relevant sections in the following pages.


Pre-use inspection

Set Water Heater Temperature

Set the water temperature to 60° C or above. If the heater temperature is too low, you may not get sufficient hot water flow or temperature. If the temperature setting is unknown, set it to the maximum

Check Water Temperature

Use the thermostatic handle to adjust water temperature. Under normal conditions, do not press the safety lock button during bathing. Turn the temperature handle to approximately 38° C and stop there.

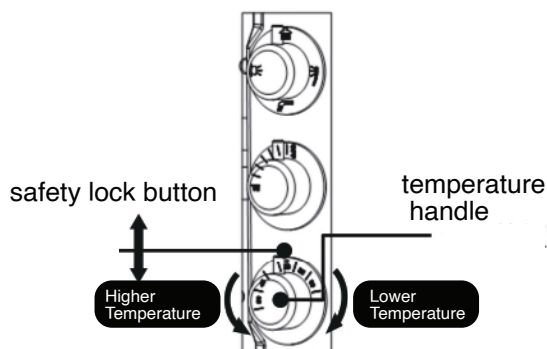


Note: For higher temperature hot water, press and hold the safety lock button while turning toward the high-temperature direction (left). HIGH TEMPERATURE RISK - use caution.

Note: The thermostatic handle is factory preset. Actual water temperature may differ from 38° C depending on your cold/hot water pressure and heater temperature. Consult your dealer for adjustment.

Check The Seat

Confirm the seat is undamaged before use. The seat can be placed in a folded position or pulled down while using.

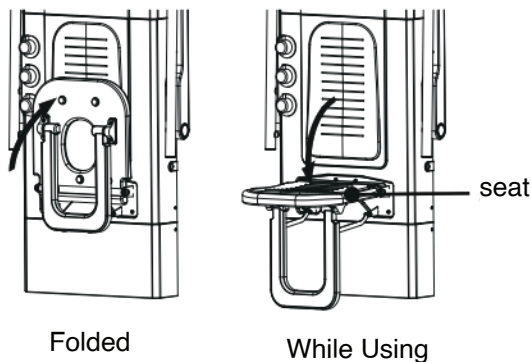

If the support leg is loose

Refer to page 15 for details.

Accessories & Replacement Parts

For information on accessories replacement parts (such as the Hand Shower and Hose), please contact your dealer.



Hand Shower




Hose

How to Use


Seated Showering

Adjust the height of the shower arm and the direction of the shower head to achieve the desired spray position.



Shower Arm Height Adjustment

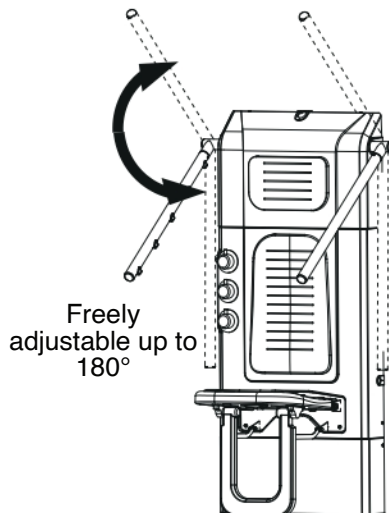

Shower Arm Direction

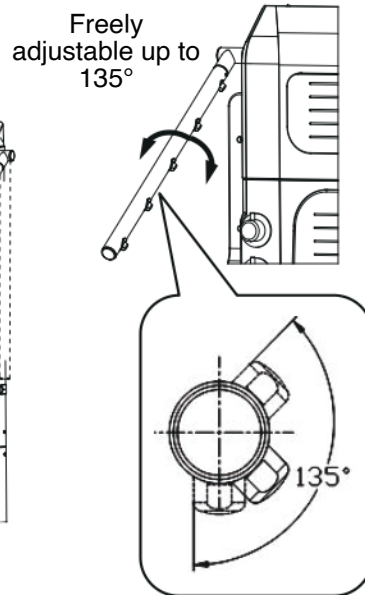


Shower Head Direction

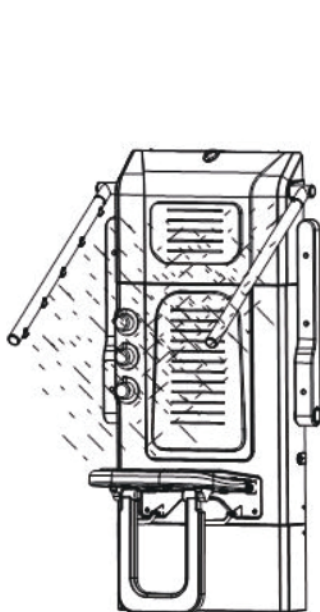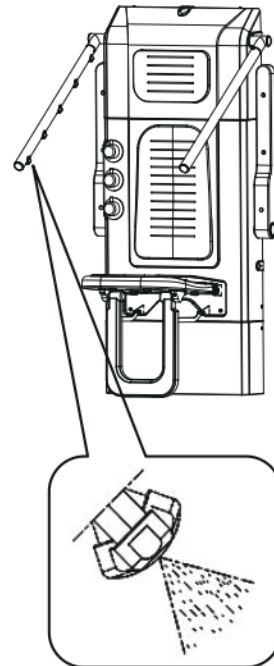


Seated shower

Refer to page 7 for details.

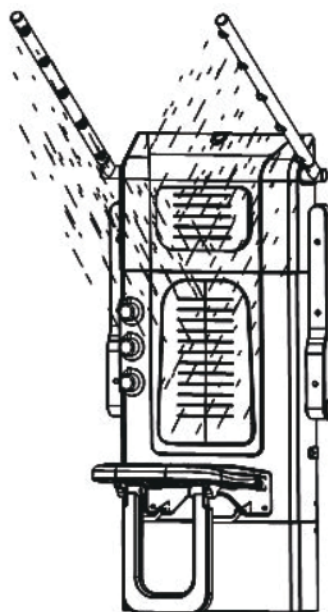

Standing shower

Refer to page 9 for details.

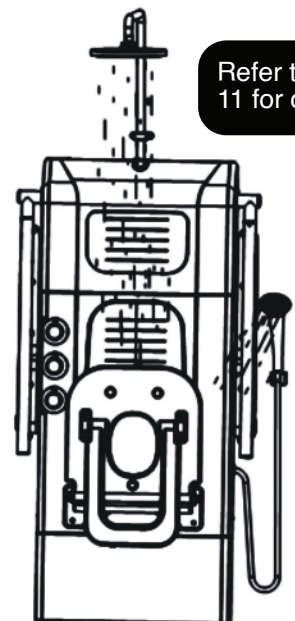

Hand Shower

Refer to page 11 for details.

Refer to page 10 for details.

SAFETY PRECAUTIONS

Please strictly follow the instructions in this section..

To avoid personal injury and property damage, be sure to follow all relevant instructions.

- The following symbols are used to indicate the level of hazard that may result from improper use of this product.



WARNING Indicates a situation that may result in death or serious injury.



CAUTION Indicates a situation that may result in injury or property damage.

- The following symbols indicate mandatory actions.



Indicates actions that are forbidden

Prohibited



Indicates that taking the unit apart is forbidden

Disassembly is prohibited.



Indicates actions that must be followed.

Mandatory

>>>




WARNING

<<<

Throughout the product's service life



★ Do not attempt to modify or disassemble the inner mechanisms of the seat or unit base

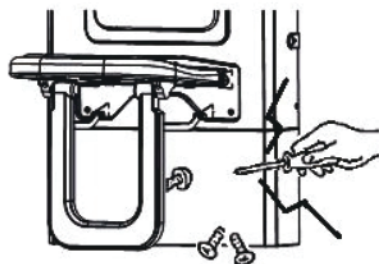

★ Do not allow children or persons with limited mobility to use the product alone
May cause burns or injury.



★ Do not pull or hang on the overhead shower.
★ Do not rotate the shower head.
Risk of product damage or injury from falling.



★ When using a water heater or other equipment, follow their respective instruction manuals and safety notices.

Otherwise, it may cause product damage or injury from falling.

>>>



CAUTION

<<<

While Showering



★ Do not turn the temperature handle abruptly.
Sudden temperature change may cause discomfort or injury.



★ Reduce water temperature before switching from overhead to hand shower.
Otherwise, hot water may cause discomfort or injury.

PRECAUTIONS BEFORE USE



CAUTION



While Showering



- ★ **Do not stand on the seat.**
Otherwise, it may cause the user to fall or damage the product.



- ★ **Sit in the center of the seat.**
Otherwise, you may slip or fall and get injured. Sitting on the front edge may also damage the seat and cause injury.




- ★ **Do not hang or drop objects on the handheld shower head**
Otherwise, the product may be damaged or cause injury.



- ★ **Do not use if the handheld shower head is cracked or coating is peeling.**
Risk of leakage or injury.



- ★ **Do not use without the decorative cover.**
Risk of burns.

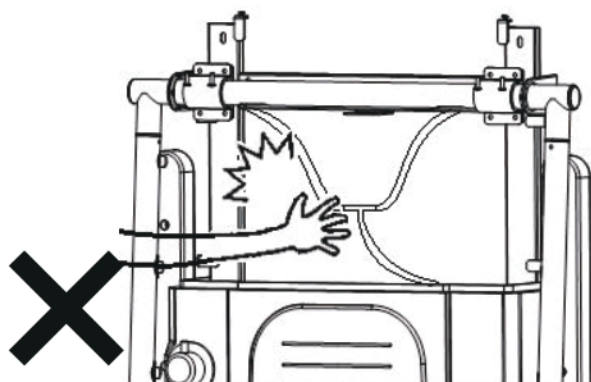


- ★ **Avoid impact between the overhead shower and the wall.**
Otherwise, it may cause product damage or injury to the user.




- ★ **If the unit or seat is damaged, stop using it immediately.**
Otherwise, it may cause burns or injury.



- ★ **Open or fold the seat as shown in the illustration.**
- ★ **Check surroundings before operating the seat.**
Do not grip other parts or place fingers in metal components when operating the seat. Releasing the seat during operation may cause it to fall and result in injury.

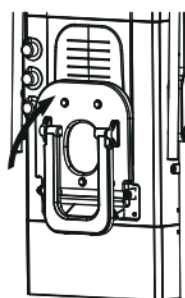

Folded

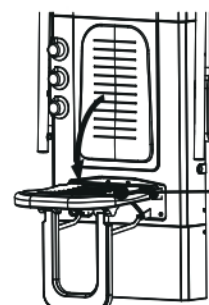

While Using

Seat




- ★ **Do not place any objects on the main cover.**
Falling objects may cause injury.



- ★ **Do not pull or tug the shower arm or spray head with excessive force.**
Otherwise, the product may be damaged or may cause slipping or injury.



- ★ **After use, do not leave any bath product residue on the unit when cleaning.**
Otherwise, resin parts may crack and cause injury

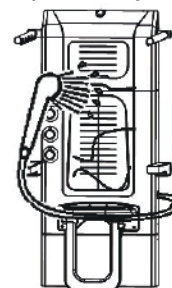

- ★ **Do not hang heavy objects on the overhead shower.**
Falling objects may cause injury.

Maintenance & Cleaning



★ **Follow the specified cleaning and maintenance steps.**
Otherwise, it may cause burns, injury, or water leakage.




★ **Ensure the drain valve and filter are cool before handling.**
Otherwise, it may cause burns.



★ **Drain water completely when freezing is expected.**

COMPONENT NAMES

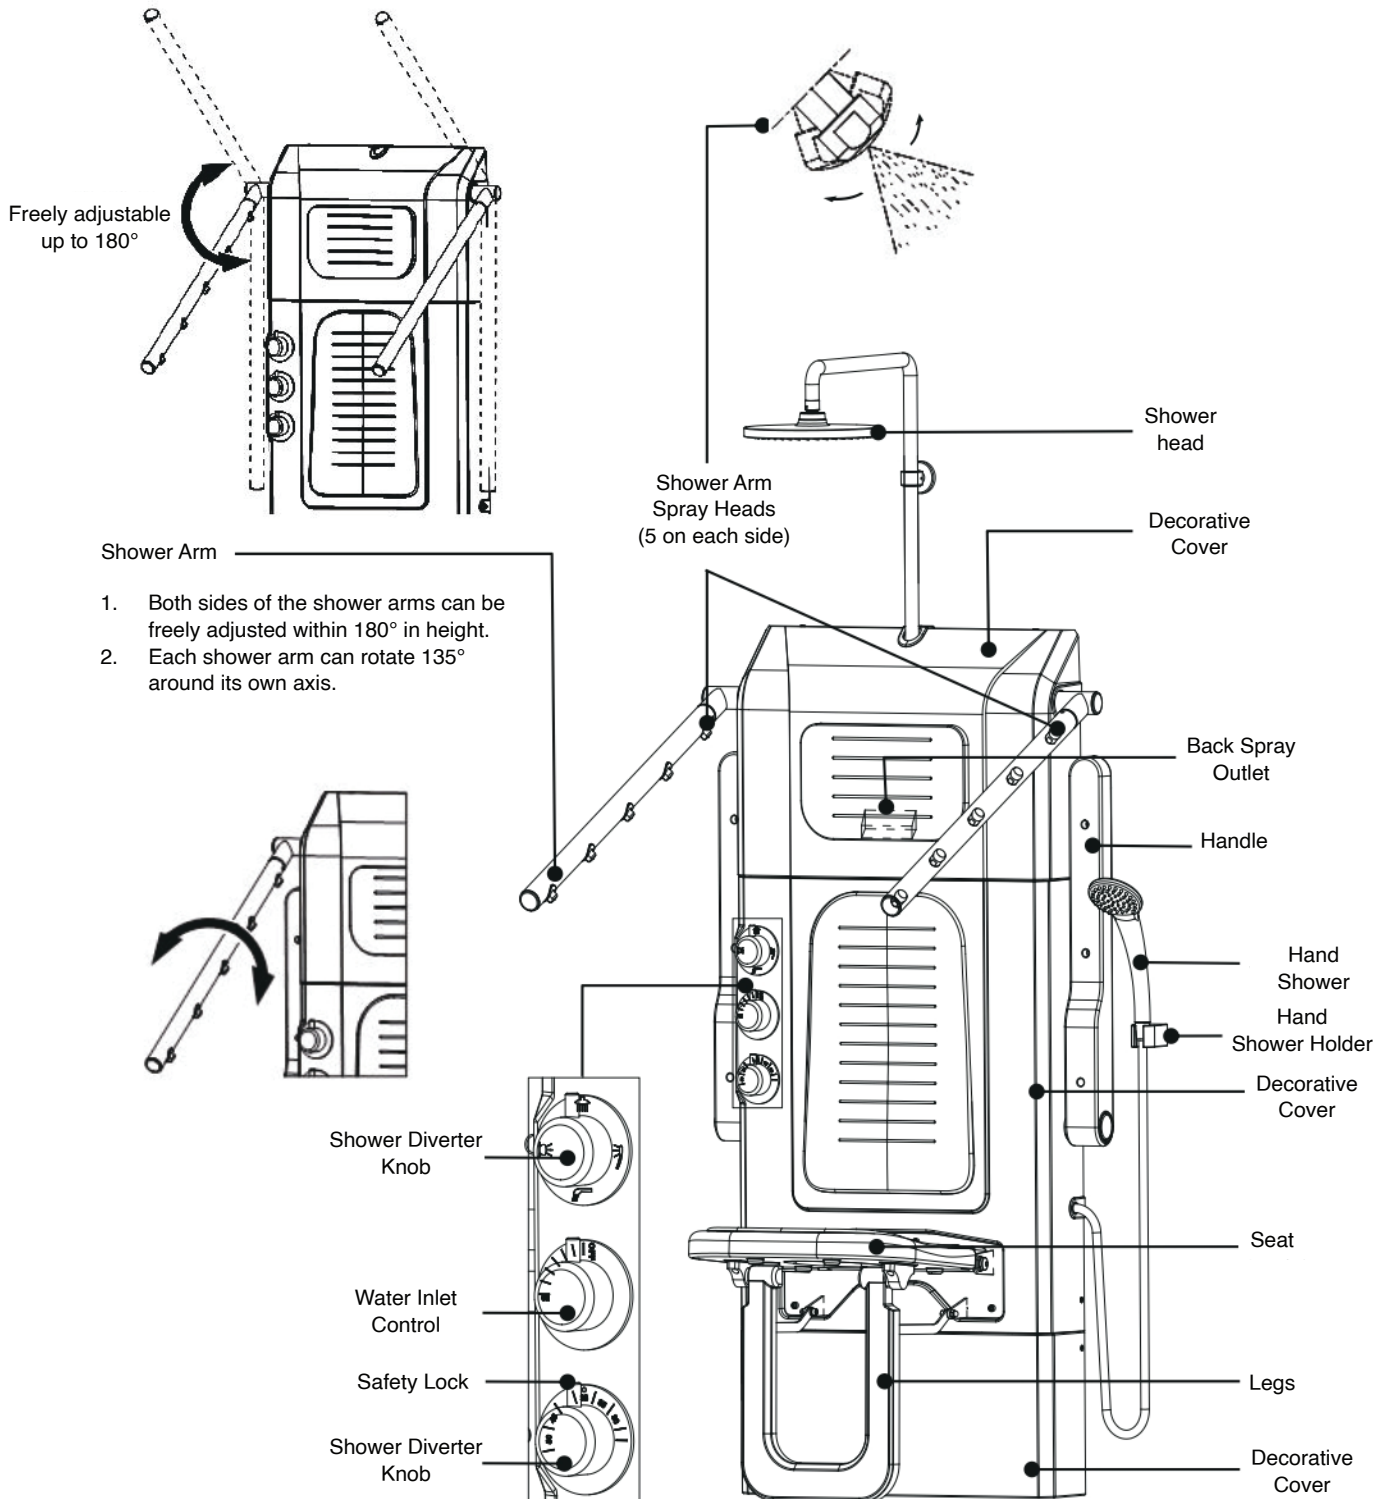

HOW TO USE WHEN SHOWERING




If cold water remains in the pipes or hose, the first water discharged may be cold.

SEATED

1

Turn on the Hand Shower and Check the Water Temperature


With the shower arm and seat folded away, turn the Shower Diverter Knob to Hand Shower and check the water temperature before use.

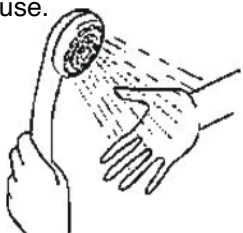


2

Adjust Water Temperature


Normally, do not press the safety button during bathing. Turn the temperature control knob to the high-temperature stop position.

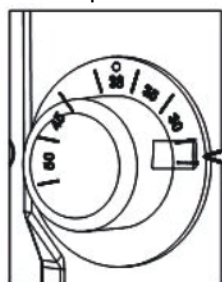

Normal Temperature
(Cool)

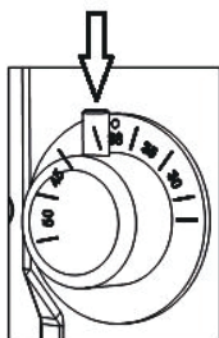

38°C (Comfort)

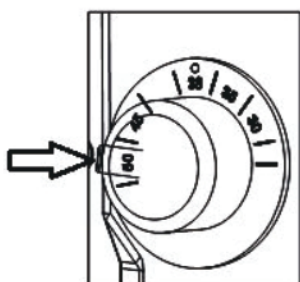


50°C (Hot)


3

Switch to Shower Arm Mode

Lower the shower arm and turn the spray nozzles toward the wall side. Turn the Shower Diverter Knob to Shower Arm Shower mode.

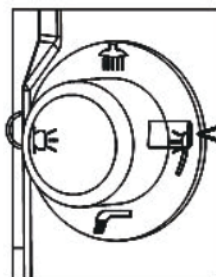

Hand Shower
Mode

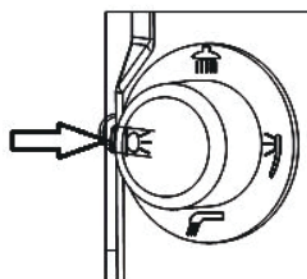


Shower Arm
Shower Mode

4

After checking the water temperature, lift the shower arm.


Adjust the shower arm to a suitable height.

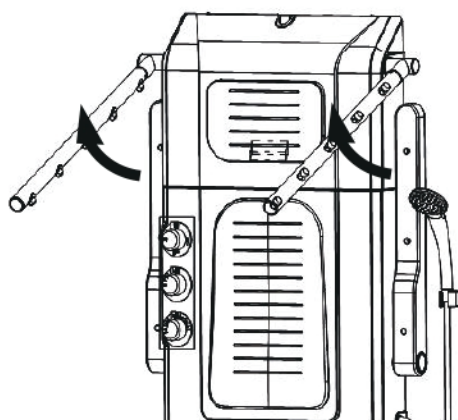

5

Open the seat and sit in the center.

Hold the top of the seat and unfold it until the legs are firmly on the floor.

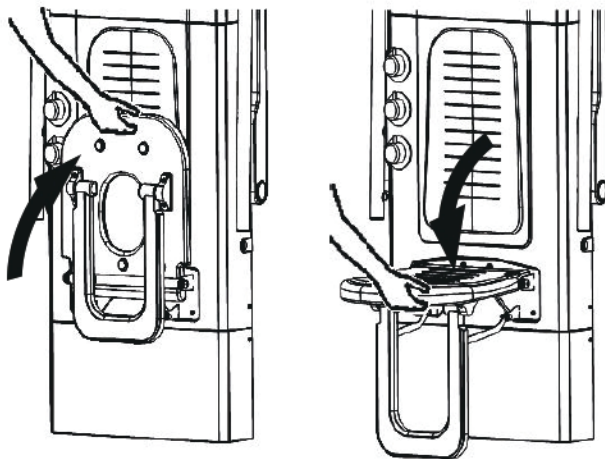


Folded

While Using


6

Adjust the shower arm and nozzle angle.

- ① Rotate around the shower arm's axis to set a suitable angle for seated showering.

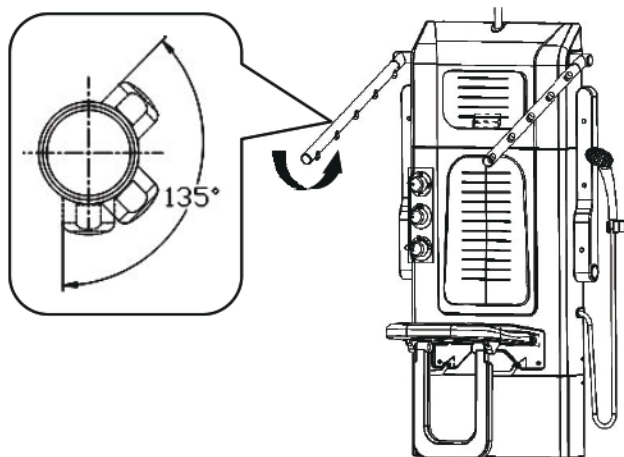

- ② Adjust the nozzles on the shower arm to an angle suitable for showering the shoulders and legs.

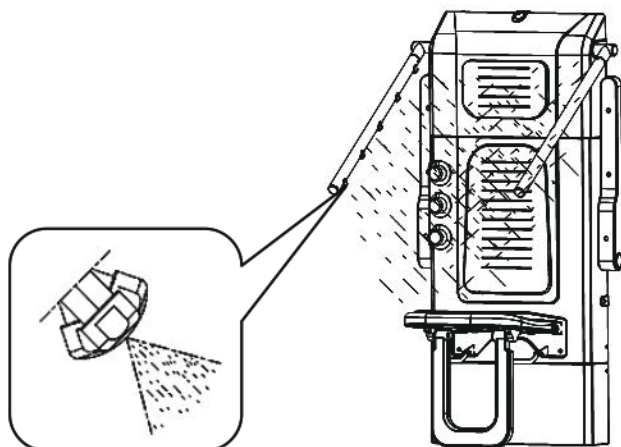

7

After Turning Off the Water

- ① Turn the Water Inlet Control to the "OFF" position to stop water flow.
- ② Turn the temperature control knob to the 38°C (Comfort) position.
- ③ After use, some nozzles may drip water for a short time as residual water in the pipes drains out. This is normal and not a malfunction.


8

Cleaning After Use

..... Refer to page 13 for details.


!

- ① When using the Shower Arm Shower Mode while seated, the recommended user height is 150–185 cm.
- ② Adjust the shower arm and nozzles to a comfortable position before use.
- ③ For users under 150 cm, water may enter the ears. Use commercially available shower ear covers if necessary.
- ④ The maximum seat load is 150 kg.
- ⑤ If the shower arm gets in the way while seated, fold it away.
- ⑥ Do not pull on the lower part of the seat legs, as this may cause deformation.

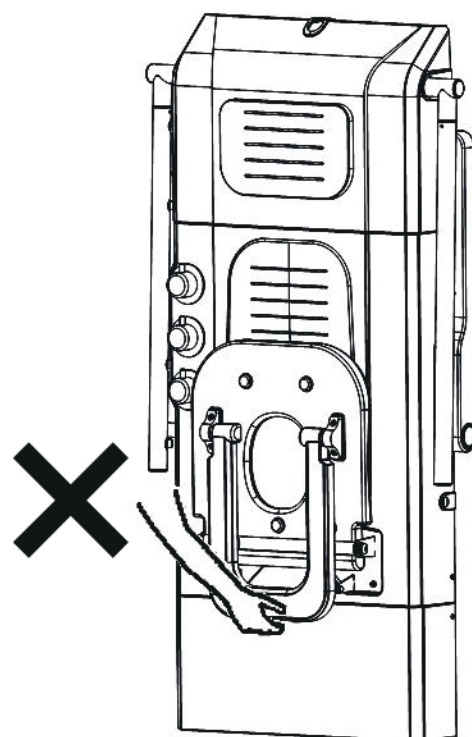

STANDING

- 1 Release Hot Water**
With the shower arm and seat folded away, turn the Shower Diverter Knob to Hand Shower and check the water temperature.
- 2 Check the Water Temperature**
Check the current temperature of the escaping water.
- 3 Adjust Temperature**
Adjust the water to a comfortable temperature.
- 4 Raise the Shower Arm**
Lift the shower arm and adjust it to a suitable position for standing showering.
- 5 Adjust the Shower Arm and Nozzle Angle**
 1. Adjust to a suitable angle to avoid spraying hot water on the face or ears.
 2. Do not use excessive force when lifting the shower arm

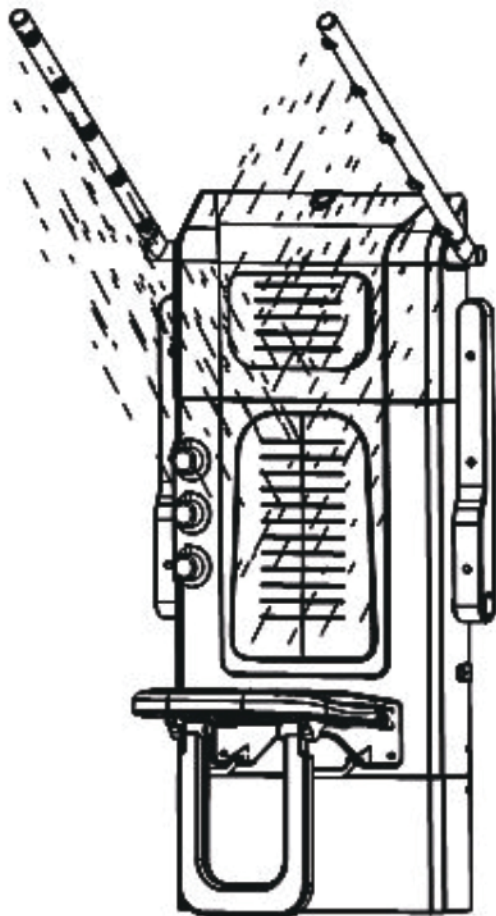


- 6 After Turning Off the Water**
 1. Turn the Water Inlet Control to the OFF position to stop the water flow.
 2. Turn the temperature control knob to 38°C (Comfort).
 3. Some nozzles may drip for a short time after use as residual water drains from the pipes. This is normal and not a malfunction.

- 7 Cleaning After ... Use**


Refer to page 12 for details.

HANDHELD

- 1 Release Hot Water**
Turn the Shower Diverter Knob to Hand Shower and check the water temperature.

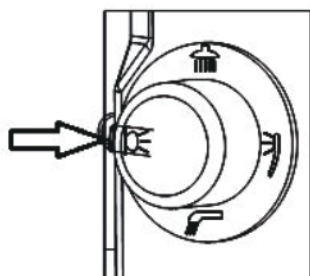

Shower Arm
Shower Mode

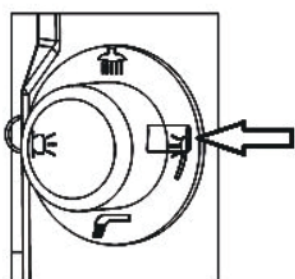

Hand Shower
Mode

- 2 Adjust temperature**



Important Notice:
When switching from Shower Arm Mode to Hand Shower Mode, the water temperature may become hotter.




CAUTION



★ Before switching from Shower Arm Mode to Hand Shower Mode, reduce the water temperature first if using hot water. Otherwise, excessively hot water may cause discomfort.

- 3** Direct the Hand Shower toward your body, then place it on the Hand Shower Holder.

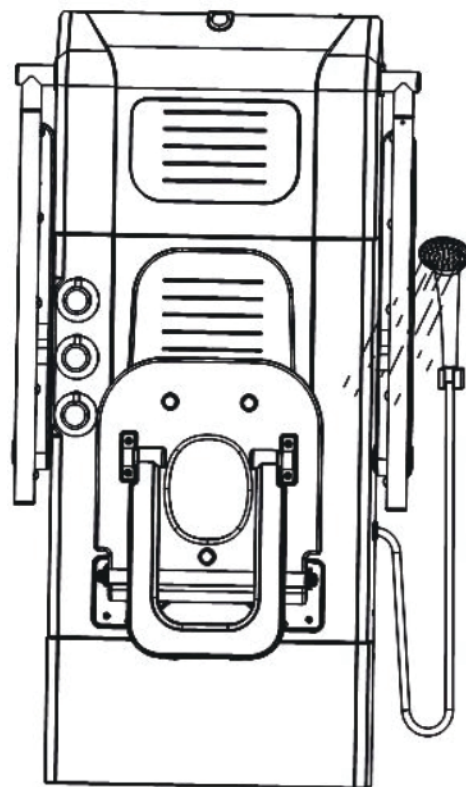

Please ensure the Hand Shower does not fall, as this may cause damage.

If the flexible hose becomes twisted, rotate the hand shower to adjust its direction.



- 4 After Turning Off the Water**
 1. Turn the Water Inlet Control to the OFF position to stop water flow.
 2. Turn the temperature control knob to 38°C (Comfort).
 3. Some nozzles may drip for a short time after use as residual water drains from the pipes. This is normal and not a malfunction.

5

Cleaning After ... Use

Refer to page 12 for details.

OVERHEAD

1


Release Hot Water

Turn the Shower Diverter Knob to Hand Shower and check the water temperature.


2

Turn the Shower Diverter Knob to Overhead

A. Cold water in the pipe will be discharged first.
B. Do not allow the user's body to be exposed to the cold water.

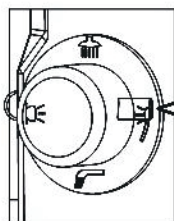

Hand Shower Mode

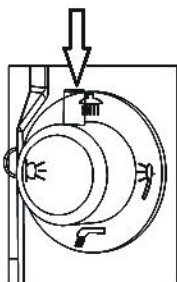


Overhead Shower Mode

3

Adjust temperature

Set to your desired comfort level

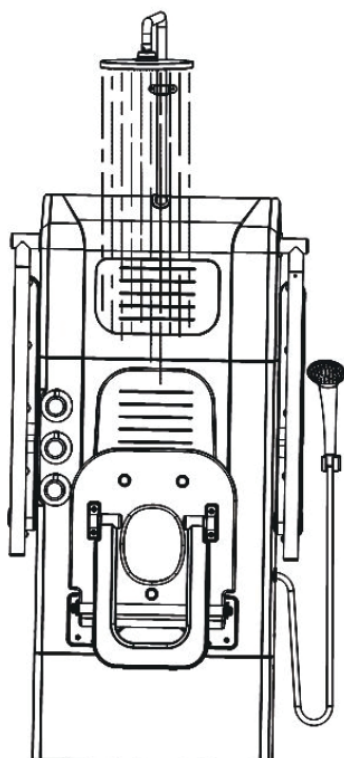

4


After Turning Off the Water

① Turn the Water Inlet Control to the OFF position to stop water flow.

② Turn the temperature control knob to 38°C (Comfort).

③ Some nozzles may drip for a short time after use as residual water drains from the pipes. This is normal and not a malfunction.

④ If the overhead shower is tilted when the water is turned off, water may continue to drip. This is normal. Keeping the spray face level before turning off the water will reduce dripping.

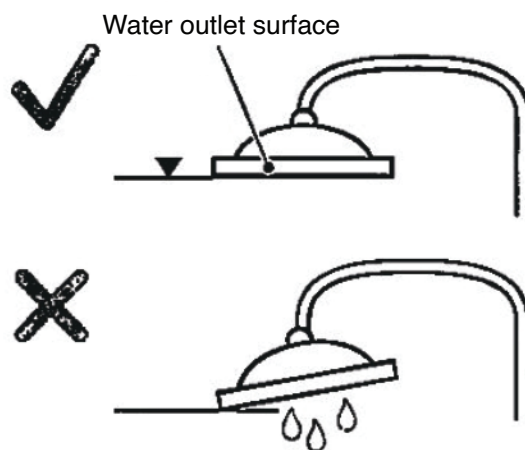

5


Cleaning After ... Use

Refer to page 12 for details.



If the overhead shower head is loose or swinging, tighten the bolts between the pipe holder and the wall.

Be careful to avoid the shower head hitting the wall.


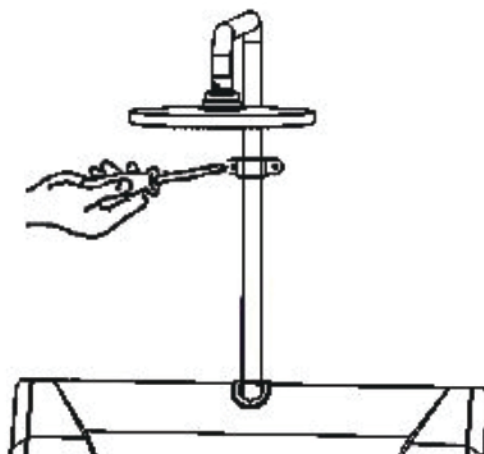


CLEANING & MAINTENANCE

AFTER USE CARE

- 1 Rinse:**
Rinse off any bath product residue using the Hand Shower.

- 2 Fold Components:**
Fold the shower arm, seat and hand shower back into place, ensuring the flexible hose sits on the outside of shower arm.

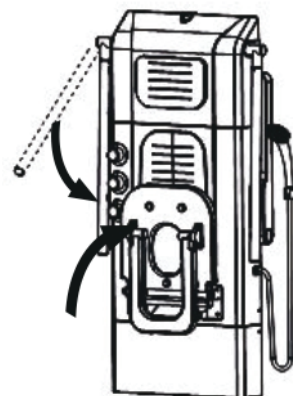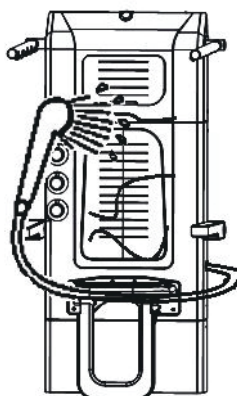

CLEANING & MAINTENANCE

Clean regularly using a mild bathroom cleaner (neutral detergent).

If stains appear, wipe them off immediately.



MAIN BODY

Tools and
Cleaning
Agents



Soft Cloth



Sponge



Bathroom
Cleaner (Neutral)



Thick Rubber
Gloves

Application:

Apply a neutral bathroom cleaner to a soft cloth or sponge, wipe the product, then rinse with water and dry with a clean cloth.




Do not use the following for cleaning and maintenance:

- Acidic cleaners
- Alkaline cleaners
- Thinners
- Benzine
- Kerosene
- Alcohol
- Cleaners containing orange oil
- Abrasive cleaners
- Abrasive sponges (may damage the product).

Cleaning Agent Usage Precautions

- Please read the instructions on the cleaning product label carefully before use and follow them correctly.
- Ensure good ventilation during and after use.
- When using non-bathroom neutral cleaners in areas other than this product, take care to avoid splashing onto the product body.
- If splashed accidentally, rinse immediately with water, then clean with a neutral bathroom cleaner, and rinse thoroughly again with water.
- Do not leave neutral bathroom cleaner on the product for more than 10 minutes. Rinse thoroughly with water after use. Residue may cause discoloration or deterioration.

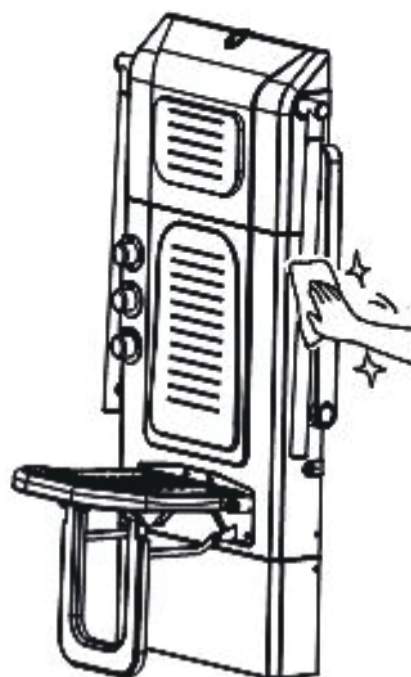

FILTER CLEANING

- ★ If you notice reduced water flow, clean the filter screen



CAUTION




- ★ Ensure the drain valve and filter screen are cool before handling. Otherwise, it may cause burns.

1

Remove the Seat

1. Lower the seat.
2. Use a tool to loosen the 4 screws on the seat mounting base.
3. Keep the screws properly to avoid loss, otherwise the product may become unusable.

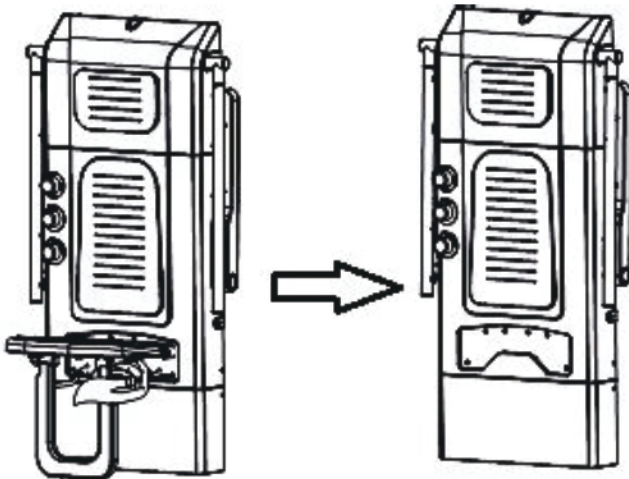


2

Remove the Middle

- Remove the screws on both sides of the middle decorative cover.

Keep the screws properly to avoid loss, otherwise the product may become unusable.

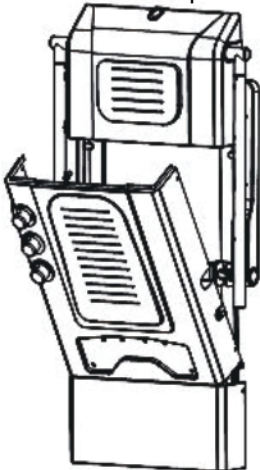


3

Remove the unions from the hot and cold water inlets of the thermostatic valve and take out the filters for cleaning.

Clean the filters using a toothbrush.

Important:

Make sure there is no hot water supply from the hot water side; otherwise, it may cause burns.

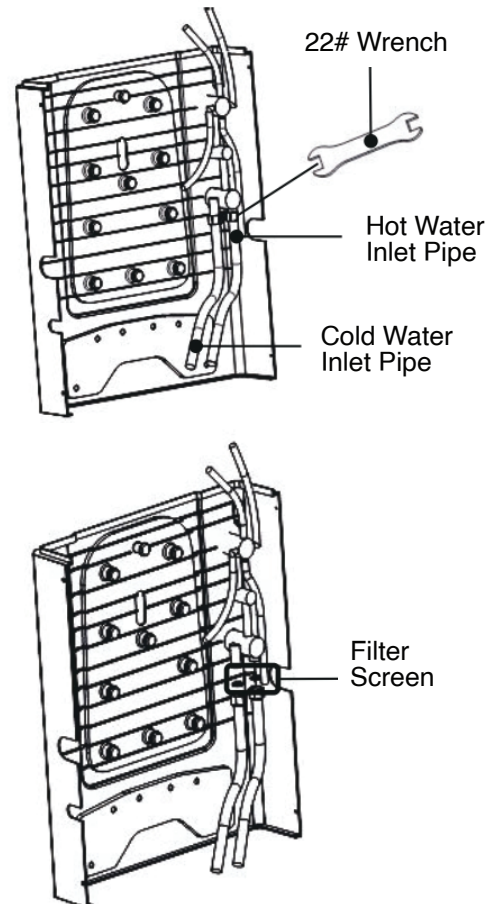

4

Reinstallation After Cleaning

Installation order: Filter Screen → Hot/Cold Inlet Pipes → Water Test (check for leaks at joints) → Middle Decorative Cover → Seat

If leakage occurs during testing, remove and realign the threads, then tighten again before retesting.

FREEZE PROTECTION

★ In areas where freezing may occur, drain all water from the product by following the steps below.




CAUTION



- ★ Ensure the drain valve and filter screen are cool before handling. Otherwise, it may cause burns.
- ★ If freezing is expected, drain all water from the product completely. Otherwise, freezing may cause the pipes to crack.

1

Turn off the main water supply valve.

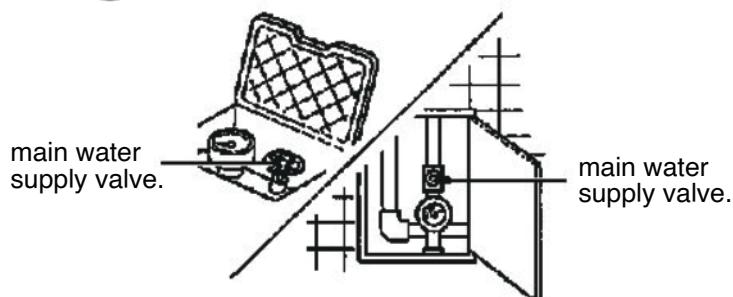


2

Remove the Bottom Decorative Cover

Remove the screws on both sides of the bottom decorative cover.




Keep the screws properly to avoid loss, otherwise the product may become unusable.

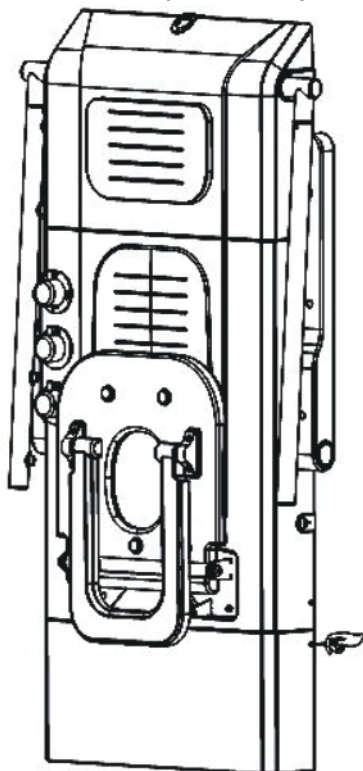

3

Drain Water from All Shower Modes

1. Open the drain valve.
2. Turn the Shower Diverter Knob through each shower mode until no more water flows from the pipes.

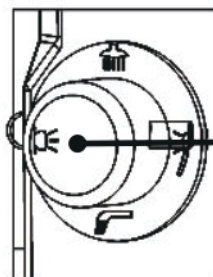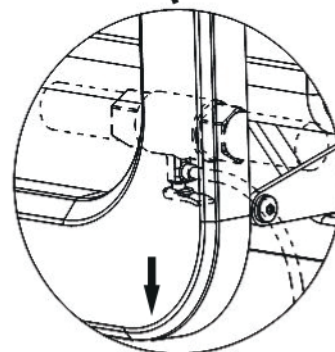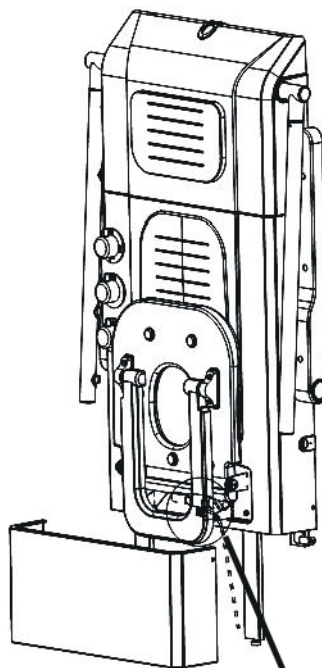

After draining one shower mode, repeat the process for the next mode.

4

Reinstall the bottom decorative cover.


1. Align the mounting holes of the bottom decorative cover with the screw holes on the main frame.
2. Tighten the screws on both sides.

SUPPORT FEET

1

After draining, reinstall the bottom decorative cover

1. Use an adjustable wrench to adjust the leveling bolts until the support feet rest firmly on the floor.
2. After adjustment, tighten the lock nuts to secure the bolts.

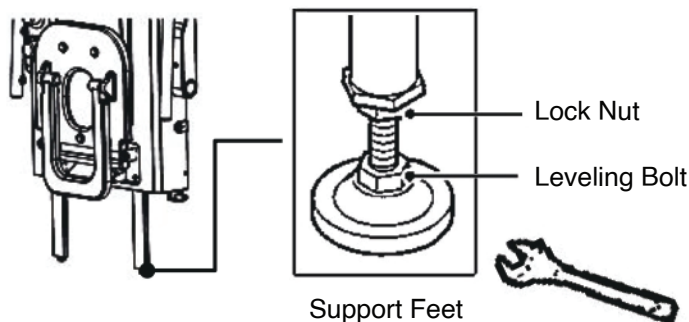

TROUBLESHOOTING

**If the product malfunctions, stop using it immediately and inspect it.
If the problem persists after performing the checks below, contact your dealer.**

Please read the following
“In Case of the
Following” section and
check whether the same
issue occurs.



If the problem remains
unresolved

Please contact your
dealer



If the following occurs	Solution	Possible Causes	Pages
Continuous water flow	Turn the Water Inlet Control to the OFF position.	The Water Inlet Control is not turned to the OFF position.	Page 7
Low water flow	Clean the filter screen	The filter screen in the shut-off valve is blocked by debris.	Page 15
No Hot Water	Turn on the water heater.	The water heater is not turned on.	Page 2
	Run the Hand Shower until sufficient hot water comes out before use.	Cold water remains in the hot water pipe.	Page 8
Unstable Water Temperature	Check the water heater temperature setting.	Incorrect water heater temperature setting.	Page 2
After Use, Water Drips from Nozzles	This is not a malfunction. If dripping continues for more than 10 minutes, it may be a fault. Please contact your dealer.	Residual water remaining in the pipes after use.	Page 9, Page 13
Unstable Shower Water Temperature and Flow	Reduce water usage from other water outlets.	If other water outlets in the kitchen or bathroom are used simultaneously, the water temperature may decrease depending on the performance of the water heater.	—
Seat Cannot Be Used Properly	Check whether the seat linkage rod is deformed. If so, contact your dealer for replacement parts.	The seat is not positioned or operated correctly according to the instructions.	Page 12

SPECIFICATION

Model	Main Unit	SRTDB808-005	
Connection	Thread	G1/2 Male Thread (Water Valve Connection)	
	Operating Pressure	100–600 kPa (0.1–0.6)	
	Pressure Resistance	1.75 MPa (1 minute)	
Weight	Around 18kg (No including Overhead Shower)		
Control Section	Temperature Control Handle	Cold water ~ approx. 47°C	
	Shower Diverter Knob	Shower Arm Shower / Hand Shower / Back Spray / Overhead	
	Switch Button	When the overhead shower is selected, water will only flow when the knob is set to that position.	
	Shower Arm Shower	Height adjustment : Vertical downward (when folded) ~ up to 180° Direction adjustment : Lower side ~ inward 90° upward 5 outlets (both ends of shower arm, waist nozzles)	
	Seat	Foldable / retractable design	
Basic Performance	Shower Water Flow Rate	Shower Arm Shower / Waist Nozzles	9.0 L/min (at 100 kPa)
		Hand Shower	7.4 L/min (at 100 kPa)
		Overhead Shower	6.0 L/min (at 100 kPa)
	Temperature Control Performance	Comfort Limit : Safety button stops at approximately 38°C	
		Maximum Heat Limit : Prevents water above approximately 47°C from flowing	
Material	Seat / Cover / Nozzles	Resin	
	Shower Arm	Metal	
	Overhead Shower	Metal	
	Hand Shower	Resin	

REPLACEMENT PARTS

For details on consumables and replacement parts, please contact your dealer.




Hand Shower



Hose

INSTALLATION DIMENSIONS

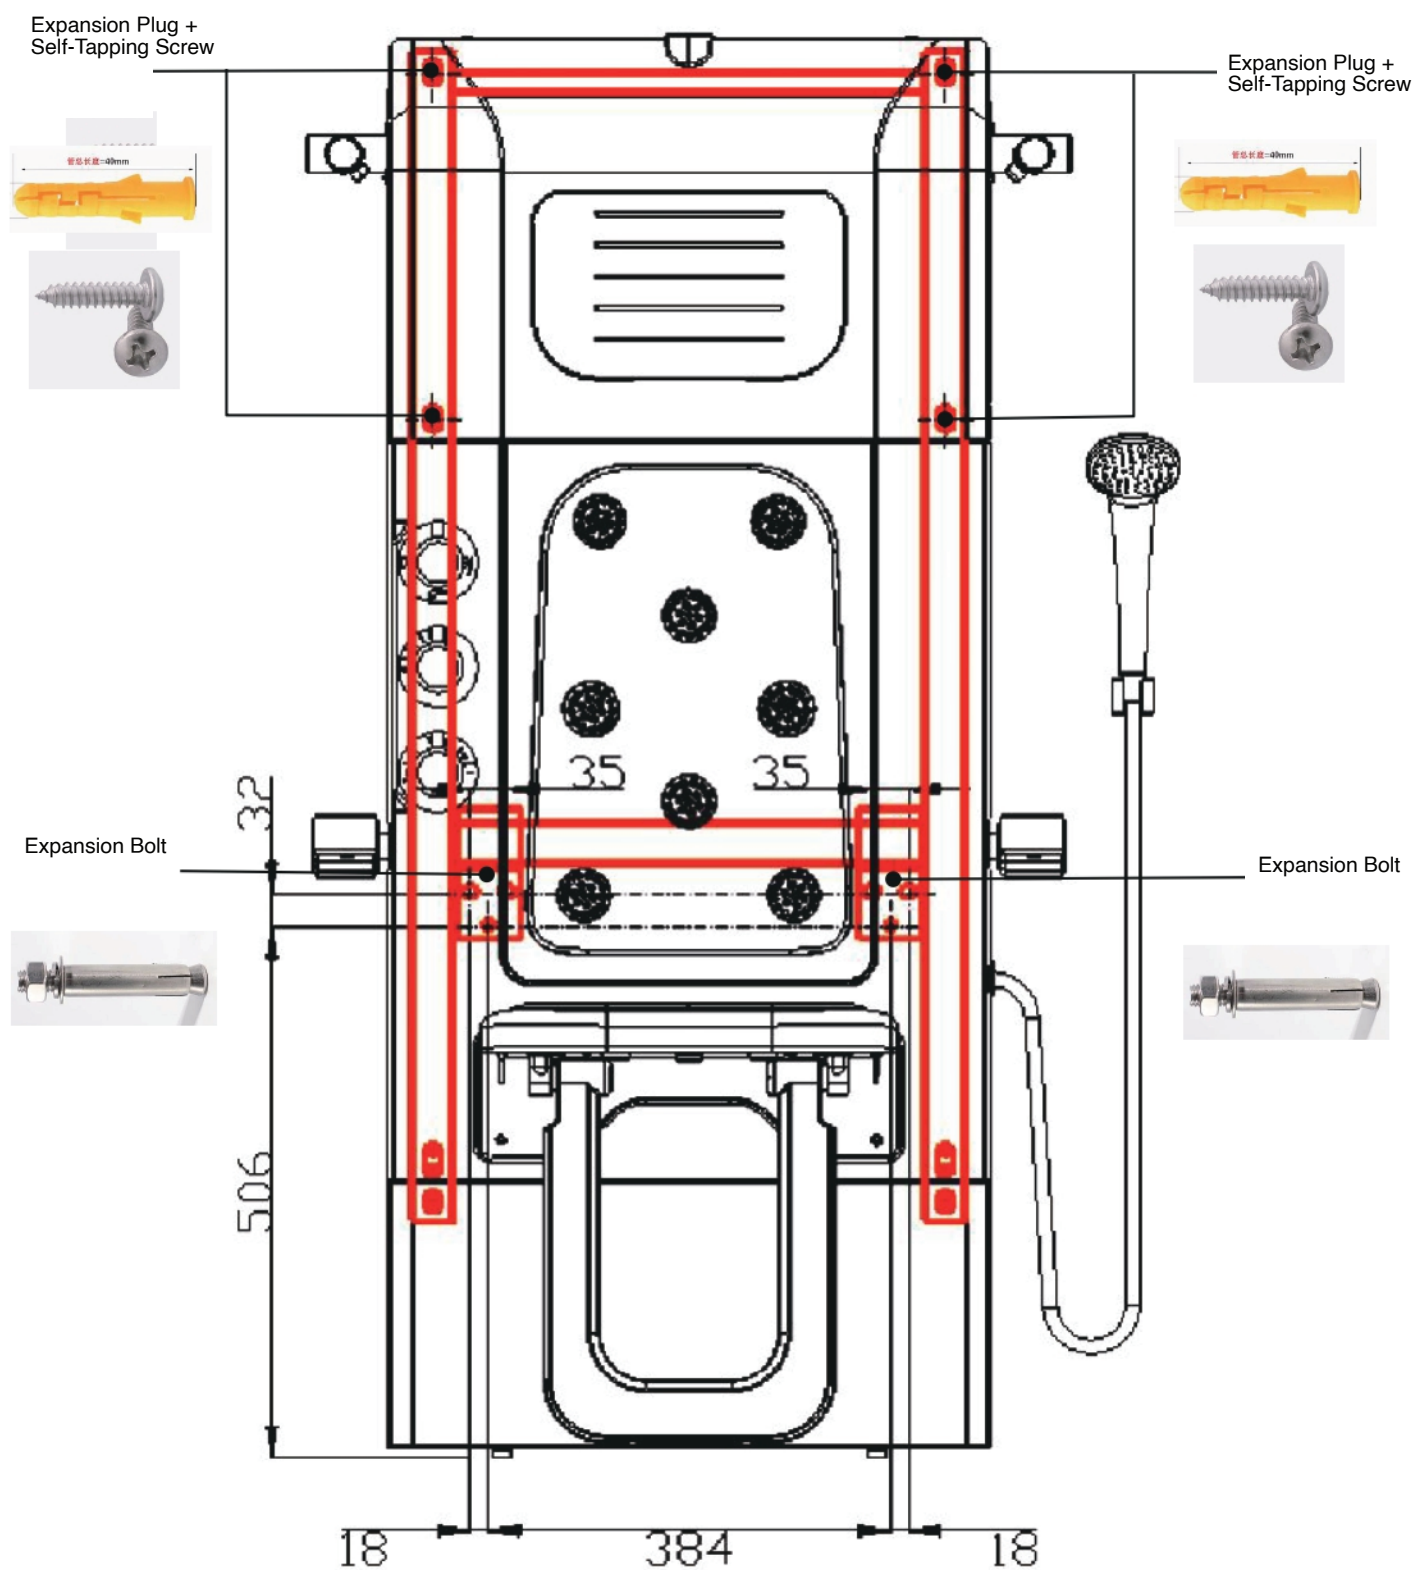

- Drill holes in the wall according to the dimensions shown. Install the expansion bolts into the holes, then secure the mounting fixing bracket.
- Insert the lower horizontal pipe of the unit into the mounting fixing bracket.
- Drill holes for the expansion plugs, then secure the upper part of the unit using the wall plugs and self-tapping screws.